Professional Series

collezioni

INSTRUCTION MANUAL

COFFEE URN

MODEL:
PS77931

Professional Series

collezioni

MANUAL DE INSTRUCCIONES

DISPENSADOR DE CAFE

MODEL:
PS77931

Parts Description

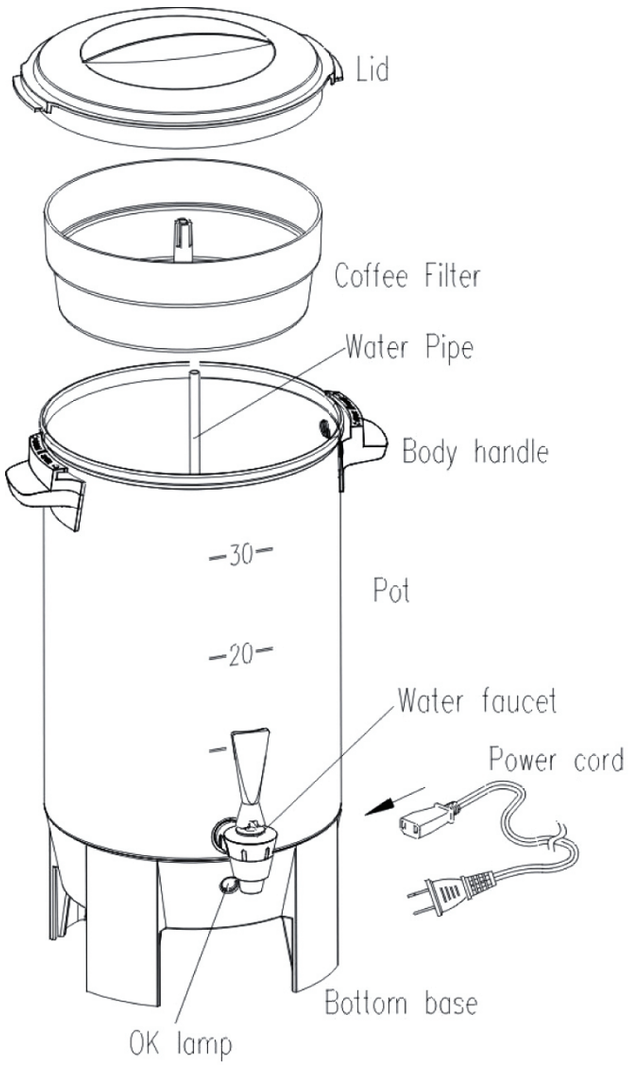

SAVE THESE INSTRUCTIONS

CONSERVE ESTAS INSTRUCCIONES

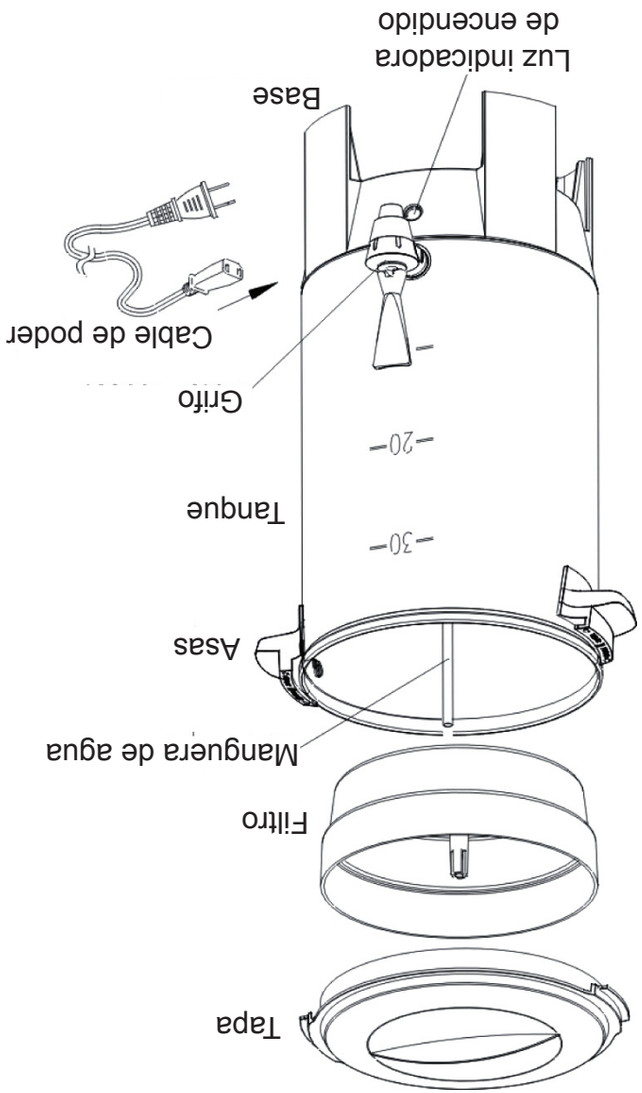

Descripción de Partes

IMPORTANT SAFEGUARDS

When using your Coffee Maker, basic safety precautions must always be followed, including the flowing:
-Read all instructions.
-Do not touch hot surface. Use handles or knobs.
-Never plug on the coffee maker without water inside its pot, or the appliance will cutoff automatically, until your unplug and let it cool down. Heating element may damage after day heating.
-Do not add water beyond the max. level.
-To protect against fire, electric shock or injury to person, do not immerse cord, plug in water or other liquid.
-Close supervision is necessary when the coffee maker is in use or when coffee is hot. Do not used it by children or near children.
-Unplug from outlet when do not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the coffee maker.
-Do not operate this coffee maker when the power cord or plug damaged or if the appliance malfunctions, is dropped or has been damaged in any manner. Return it to the Authorized Service Station for examination, repair, electric or mechanical adjustment.
-The use of accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock or injury to person.
-Do not use outdoors.
-Do not let cord hang over edge of table and counter, or touch hot surface.
-Do not place or near a hot gas or electric burner, or in a heated oven.
-Do not move the coffee maker while in use or when coffee is still hot.
-To disconnect, turn any control to “off”, then remove plug from wall outlet.
-A short power cord is to be provided to reduce the risk resulting from becoming entangled in tripping over a long cord.
a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
c) If a longer detachable power-supply cord or extension cord is used, 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- The appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- Do not use appliance for other than intended use.
- Scalding may occur if lid is removed during the brewing cycles.

SAVE THESE INSTRUCTIONS

Before Using For The First Time
-Read all instructions thoroughly.
-Take the coffee maker and all accessories out of the packing carefully.
-Clean the coffee maker with a clean, dump cloth.
Note: Do not immerse the coffee maker in any liquid.

MEDIDAS DE SEGURIDAD

• Cuando utilice la cafetera, tiene que seguir las siguientes indicaciones.
• Lea todas las instrucciones.

• No toque la superficie caliente. Utilicé las manillas y los tiradores.
• Nunca enchufe la cafetera sin el agua dentro de ella, sino el aparato se apagará automáticamente, hasta que lo reinicie manualmente.
• Para protegер del fuego, de choques eléctricos o de heridas a las personas, no sumerja la cuerda en agua o en otro líquido.
• la supervisión de cerrar es necesaria cuando la cafetera es utilizada o cuando el café esta caliente. No permita a los niños utilizarlo, No lo deje al alcance de los niños.
• Desenchufe de la electricidad cuando no lo use y antes de limpiarlo. Permita que se enfrie al poner o quitar las partes y antes de limpiar la cafetera
No opere la cafetera cuando se dañe la cuerda de poder o el tapón y si hay funcionamiento defectuoso del aparato,.Llévelo al centro de servicio,

• No permita que la cuerda cuelgue sobre la orilla de la mesa o el mostrador, o que toque la superficie caliente.
No lo coloque cerca de un gas caliente ni quemador eléctrico, ni un horno calentador

• No mueva la cafetera mientras esta en uso ni cuando el café esta todavía caliente.

CONSERVE ESTAS INSTRUCCIONES

• Antes de utilizarlo por la primera vez
• --Lea completamente todas las instrucciones
• --Saque la cafetera y todos accesorios fuera del empaque detenidamente.
Limpie la cafetera con una tela limpia.
NOTA: no sumerja el aparato en ningún líquido.

INSTRUCCIONES DE OPERACIÓN

* Agregue el agua
*Saque el filtro de café y el tubo de agua, agreguen agua fría en el recipiente según el numero de tazas que quiera. (30 max. de tazas.)
NOTA: No utilicé agua caliente.
No agregue demasiada agua, no sobrepase el nivel máximo de agua.

2. Agregue café
* Agregue el volumen apropiado de cate en el filtro de café, usted puede ajustar el volumen según su propia elección y la clase de café.

OPERATING INSTRUCCTION

1. Add water

Take the coffee filter and the water pipe out, add cold water into the pot according the cup number you want. (30 cups max.)

Note: Do not use hot water.

Do not add too much water beyond the max. level.

2. Add coffee

a. Add proper volume of coffee into the coffee filter, you can adjust the volume according to your own choice and the kind of coffee.

Note: Do not add too much coffee, the top level of coffee should be lower than the edge of the coffee filter by 2 cm /1 inch. Or the coffee may floor out during heating.

b. Fit the water pipe into the bottom of the coffee filter, and put them into the coffee maker carefully until you fit the bottom base of the water pipe into the heating element.

3. Heating coffee

a. Close the lid and rock it.

b. Insert the power cord into the power socket of the appliance, and insert the plug into appropriate outlet. The coffee maker is heating now.

Note: Do not open the lid when the coffee maker is heating.

4. Keep warm coffee

When the temperature of the water reach about 85℃, it show that the coffee is cooked now. The coffee maker will switch to keep warm automatically, and keep the coffee inside in a suitable temperature. The OK lamp light on.

5. After using

Unplug the coffee make after using or you do not want to keep warm the cooked coffee.

CLEANING

Note: DO NOT IMMERSE THE MAIN BODY , POWER CORD OR PLUG IN ANY LIQUID.

Clean the heating element after each using.

Make sure that the coffee maker has been unplugged and cooled down before cleaning.

----Clean the shell with a dump cloth.

----Clean the lid, the coffee filter. water pipe and drop pan with warm water.

----Pull some clean water into the pot, clean the inside surface and the heating element gently with a soft brush. *Note: Clean the heating element after each use.*

CONSERVE ESTAS INSTRUCCIONES

NOTA: no agregue demasiado café, el nivel máximo de café debe ser más bajo que la orilla del filtro de café per 2 cm /1 inch. Sino, el café puede salirse fuera durante la calefacción.

- B Deje el tubo de agua en el fondo del filtro de café, y póngalo en la cafetera detenidamente hasta que quede en la base inferior del tubo de agua en el elemento calentador.

- Cierre la tapa

- B. Meta la cuerda del poder en el enchufe del poder del aparato, y meta el tapón en la salida apropiada. La cafetera esta caliente ahora.

NOTA: no abra la tapa cuando la cafetera esta calentando.